

Premium/Extra Maintenance Plan

PowertrainCARE 29 Covered Components

BaseCARE 84 Covered Components

ExtraCARE 113 Covered Components

PremiumCARE 1,000+ Covered Components (Partial List)

Our most comprehensive maintenance plan covers:

- Engine Oil and Filter Changes
- Multi-Point Inspections
- Tire Rotations
- Replacement of Brake Pads and Linings When Worn
- Shock Absorber Replacements
- Spark Plugs
- Clutch Discs
- Engine Belts
- Wiper Blades
- Diesel Exhaust Fluid Fill at the Time Scheduled Maintenance Is Performed at Dealership (If Necessary)

Essential Maintenance Plans

Plan ahead now and protect yourself against rising maintenance costs with this affordable choice of standard service items for your vehicle:

- Limited Maintenance covers lube/oil/filter, tire rotation, diesel exhaust fluid refill at service interval, multi-point inspection
- Basic Maintenance covers lube/oil/filter, tire rotation, multi-point inspection

- All Internally Lubricated Parts (Engine)
- Axle Shafts (Front- and Rear-Wheel-Drive Axle)
- Cylinder Block
- Cylinder Heads
- Drive Axle Housing and Front Axle Housing for 4x4 (Including All Internal Parts)
- Driveshaft
- Exhaust (Manifold and Bolts)
- Gas Fuel Injectors
- Final Drive Housing and Rear Axle Housing for 4x4 (Including All Internal Parts)
- A/C Pulley
- All Internally Lubricated Parts (Engine)
- Locking Rings (Four-Wheel Drive)
- Intake (Manifold and Bolts)
- Oil Pan
- Oil Pump
- Seals and Gaskets (Engine)
- Seals and Gaskets (Front- and Rear-Wheel-Drive Axle)
- Seals and Gaskets (Transmission)
- Thermostat
- Thermostat Housing
- Timing Chain (Gears or Belt)
- Timing Chain Cover
- Torque Converter
- Transfer Case (Including All Internal Parts)
- Transmission Case (Including All Internal Parts)
- Turbocharger/Supercharger Unit (Factory-installed)
- Universal and Constant Velocity Joints (Front- and Rear-Wheel-Drive Axle)
- Valve Covers
- Viscous Coupler/Flexible Coupler
- Water Pump

- A/C Clutch
- A/C Clutch Bearings
- A/C Compressor
- A/C Compressor Clutch Switch
- A/C Compressor Head
- A/C Compressor Seals
- A/C Condenser
- A/C Evaporator
- A/C Field Coil
- A/C Pulley
- All Internally Lubricated Parts (Engine)
- Locking Rings (Four-Wheel Drive)
- Intake (Manifold and Bolts)
- Oil Pan
- Oil Pump
- Seals and Gaskets (Engine)
- Seals and Gaskets (Front- and Rear-Wheel-Drive Axle)
- Ball Joints – Upper and Lower (Front Suspension)
- Brake Booster (Power)
- Calipers (Brake)
- Column Lock (Tilt Wheel)
- Combination Valve (Brakes)
- Control Arms (Lower)
- Control Arms (Upper)
- Control Arm Shafts & Bushings
- Control Valve (Steering)
- Cooler and Metal Lines (Steering)
- Cylinder Block
- Cylinder Heads
- Cylinder Head Pump
- Drive Axle Housing and Front Axle Housing for 4x4 (Including All Internal Parts)
- Driveshaft
- Electronic Ignition Module
- Exhaust (Manifold and Bolts)
- Final Drive Housing and Rear Axle Housing for AWD (Including All Internal Parts)
- Flywheel
- Fuel Pump
- Harmonic Balancer and Bolt

- Heated Backglass (Electrical Only – Not Glass Damage or Breakage)
- Idle Arm
- Ignition Switch
- Intake (Manifold and Bolts)
- Linkage and Bushings (Front & Rear Suspension)
- Locking Rings (Four-Wheel Drive)
- MacPherson Style Struts (Front)
- Master Cylinder
- Metal Fuel Lines (Engine)
- Metal Lines and Fittings (Brakes)
- Oil Pan
- Oil Pump
- Parking Brake Cables
- Parking Brake Linkages
- Power Steering Pump/Electric Power Steering Actuator
- Pulley Assembly (Power Steering Pump)
- Radiator Fan Relay
- Seals and Gaskets (Engine)
- Seals and Gaskets (Front- and Rear-Drive Axles)
- Seals and Gaskets (Steering)
- Seals and Gaskets (Transmission)
- Self-Adjusters (Brakes)
- Shaft (Brake Pedal)
- Speedometer/Odometer (Electrical & Mechanical)
- Spindle and Spindle Supports (Front Suspension)
- Springs (Brakes)
- Stabilizer Bar (Front Suspension)
- Starter Motor
- Starter Motor Solenoid
- Steering Gear Housing, Manual and Power (Including All Internal Parts)
- Switches (Manually Operated Electrical)
- Thermostat (Engine)

- Thermostat Housing (Engine)
 - Tie Rods (Front Suspension)
 - Timing Chain (Gears or Belt)
 - Timing Chain Cover
 - Torque Converter
 - Transfer Case (Including All Internal Parts)
 - Transmission Case
 - Turbocharger/Supercharger Unit (Factory-Installed)
 - Underbody Linkages and Couplings
 - Universal and Constant Velocity Joints (Front- and Rear-Wheel-Drive Axles)
 - Valve Covers
 - Viscous Coupler/Flexible Coupler
 - Voltage Regulators
 - Water Pump
 - Wheel Cylinders (Brakes)
 - Wiper Motors
 - Wiring Harnesses (Excluding Spark Plug Wires)
- A/C Accumulator
 - A/C Clutch
 - A/C Clutch Bearings
 - A/C Compressor
 - A/C Compressor Clutch Switch
 - A/C Compressor Head
 - A/C Compressor Seals
 - A/C Condenser
 - A/C Evaporator
 - A/C Field Coil
 - A/C Pulley
 - Adaptive Cruise Control
 - Air Suspension (Selected Electronic Components)
 - All Internally Lubricated Parts (Engine)
 - All Internally Lubricated Parts (Transmission)
 - Alternator
 - Anti-Lock Brake Module & Sensor
 - Automatic Temperature Control
 - Axle Shafts (Front- and Rear-Wheel-Drive Axles)
 - Ball Joints (Upper & Lower)
 - Brake Booster (Power)
 - Calipers (Brakes)
 - Column Lock (Tilt Wheel)
 - Control Arms (Lower)
 - Control Arms (Upper)
 - Control Arm Shafts & Bushings (Front Suspension)
 - Control Valve (Steering)
 - Cooler & Metal Lines (Steering)
 - Cylinder Block
 - Cylinder Heads
 - Diesel Fuel Injectors
 - Diesel Injector Lines
 - Diesel Injector Pump
 - Diesel Lift Pump
 - Drive Axle Housing & Front Axle Housing for 4x4 (Including All Internal Parts)
 - Driveshaft
 - ETA Pump Hose Assembly
 - Electronic Ignition Module
 - Engine Mounts
 - Exhaust (Manifold and Bolts)

- Final Drive Housing & Rear Axle Housing for AWD (Including All Internal Parts)
- Flywheel
- Flywheel Ring Gear
- Fuel Pump
- Fuel Tank and Metal Lines
- Gas Fuel Injectors
- Gas Injector Lines
- Harmonic Balancer & Bolt
- Heated Back Glass (Electrical Only - No Glass Damage or Breakage)
- Heater Blower Motor
- Heater Control Assembly
- Heater Core Assembly
- Idle Arm (Steering)
- Ignition Switch
- Instrument Cluster, Electronic (Excluding Dash Pad, Clock, Audio and Visual Equipment)
- Intake (Manifold and Bolts)
- Keyless Entry System (Excluding Door Handles)
- Linkage and Bushings (Front Suspension)
- Locking Rings (Four-Wheel Drive)
- MacPherson Style Struts (Front Suspension)
- Master Cylinder
- Metal Lines and Fittings (Brakes)
- Oil Pan
- Oil Pump
- Parking Brake Linkage & Cables
- Power Antenna
- Power Door Locks & Retainer Clips (Excluding Door Handles)
- Power Seat Motors
- Power Steering Pump/Electric Power Steering Actuator
- Power Window Motors
- Power Window Regulators
- Pulley Assembly (Steering)
- Radiator
- Radiator Fan (Clutch or Motor)
- Radiator Fan Relay
- Seals & Gaskets (Engine)
- Seals & Gaskets (Transmission)

- Seals & Gaskets (Front- and Rear-Wheel-Drive Axles)
- Seals & Gaskets (Steering)
- Securicode™ Keyless Entry
- Self Adjusters (Brakes)
- Shaft (Brake Pedal)
- Speed Control
- Speedometer/Odometer (Electrical and Mechanical)
- Spindle & Spindle Supports
- Springs (Brakes)
- Stabilizer Bar
- Starter Motor
- Starter Motor Solenoid
- Steering Gear Housing, Manual and Power (Including All Internal Parts)
- Switches (Manually Operated Electrical)
- Thermostat (Engine)
- Thermostat Housing (Engine)
- Tie Rods (Front Suspension)
- Timing Chain Cover
- Timing Chain (Gears or Belt)
- Torque Converter
- Transfer Case (Including All Internal Parts)
- Transmission Case
- Transmission Module, External
- Transmission Mounts
- Transmission Vacuum Module
- Turbocharger/Supercharger Unit (Factory-Installed)
- Underbody Linkages & Couplings (Steering)
- Universal & Constant Velocity Joints
- Valve Covers (Engine)
- Viscous Coupler/Flexible Coupler
- Voltage Regulator
- Water Pump
- Wheel Cylinders (Brakes)
- Wiper Motors
- Wiring Harnesses (Excluding Spark Plug Wires)

- A/C Accumulator
- A/C Actuator
- A/C Compressor
- A/C Compressor Assembly
- A/C Compressor Seals
- A/C Control Head
- A/C Line Assembly
- ABS Module
- ABS Sensor and Bracket
- Absorber - Steering Shaft
- Accumulator - Body Control Assembly
- Accumulator - Piston
- Actuator - Front/Rear Door Latch
- Actuator - Neutral Switch
- Actuator - Power Steering Valve
- Actuator - Steering Column Lock
- Actuator Assembly
- Actuator Assembly - Front Suspension
- Actuator Assembly - Rear Door
- Actuator Assembly - Rear Suspension
- Actuator Assembly - TV Console
- Actuator Module - Steering Column
- Actuator Module - Blind Spot Sensor Bracket
- Actuator Parking Brake Switch
- Actuator Shift Lock
- Adapter Spark Knock
- Adaptive Cruise Control
- Adjuster - Differential Bearing
- Adjuster - Door Lock
- Adjuster - Front/Rear Seat Buckle
- Adjuster - Torsion Bar
- Adjuster Assembly - Front/Rear Seat
- Adjuster Assembly - Steering Worm
- Airbag Smart Sensor Assembly
- Air Conditioner Clutch Pulley
- Air Conditioner Wiring Assembly
- Air Control Valve
- Air Idle Vacuum Valve
- Air Intake Ducting

- Air Pump Muffler
- Air Reservoir Tank Assembly
- Air Solenoid
- Air Suspension Compressor Assembly
- Air Suspension Dryer Assembly
- Air Suspension Lines
- Air Suspension Quick Connect
- Alternator
- Alternator Assembly
- Alternator Rotor
- AM/FM Receiver
- Ambient Sensor
- Ammeter - Alternator
- Amplifier Assembly
- Amplifier Assembly A/C
- Amplifier Assembly EGR Valve
- Anchor Push Rod
- Antenna Remote Control
- Anti-Lock Brake Sensor
- Anti-Slosh Module
- Anti-Skid Brake Relay
- Anti-Theft Alarm - Factory-Installed
- Arm - Steering Pitman
- Arm and Bushing Assembly - Front Suspension
- Arm and Bushing Assembly - Rear Suspension
- Arm and Pivot Shaft Assembly - Windshield Wiper
- Arm Assembly - Selector Plate
- Arm Assembly - Wiper Motor
- Arm Bushing Front Suspension
- Arm Bushing Rear Suspension
- Arm Steering Assembly - Steering Idler
- Armature - Windshield Wiper Motor
- Armature Sensor Motor Assembly
- Assembly Parking Brake Cable Adjuster
- Auxiliary Heater Assembly
- Axle Assembly - Clutch
- Axle Assembly - Rear
- Axle Shaft Assembly
- Back-Up Siren/Alarm Assembly
- Baffle - Input Shaft
- Baffle - Output Shaft
- Balance Shaft Assembly

- Ball Joint Assembly - Upper/Lower
- Ballast - Hi-Mount Stop Lamp
- Band - Front
- Band - Rear
- Band - Transmission Reverse
- Band Assembly - Transmission Intermediate
- Barometric and Map Sensor
- Barometric Pressure Sensor
- Bearing - Coupling Shaft
- Bearing - Differential Adjuster
- Bearing - Front Axle
- Bearing - Parking Brake
- Bearing - Reverse Idler
- Bearing - Worm Gear
- Bearing Assembly - A/C Comp Clutch
- Bearing Assembly - Air Comp
- Bearing Assembly - Air Suspension Compressor
- Bearing Assembly - Elect Shift
- Bearing Assembly - Gear
- Bearing Assembly - Spindle
- Bearing Cup Front Wheel
- Bearing Front Wheel
- Bearing Seal Front Suspension
- Bearings - All Internally Lubricated
- Belt Assembly Center Pass
- Blind Spot Sensor
- Blind Spot Sensor Bracket
- Block Assembly - Electrical Wiring
- Block Fuel Tube Support
- Blower Motor Assembly
- Blower Motor Resistor
- Body Assembly - Brake Booster
- Bolt - Gear Shift Housing
- Bolt Differential Gear Case
- Boost Pressure Switch
- Booster Assembly - Power Brake
- Boot - Brake Cylinder
- Boot - Drive Shaft Joint
- Boot - Gearshift Control
- Boot - Rear Axle CV Joint
- Boot - Steering Column
- Boot Courtesy Lamp Switch
- Brace - Engine to Transmission
- Bracket A/C Comp Mounting

- Bushing - Rear Suspension Upper
- Bushing - Spindle
- Bushing Assembly - Steer Column
- Bushing Front Spring
- Bushing Lockout Hub
- Bushing Rear Spring
- Button - Parking Brake Handle
- Cable - Front/Rear Seat
- Cable - Front/Rear Seat Adjuster
- Cable Assembly - Brake Shoe Adjuster
- Cable Assembly - Control Select
- Cable Assembly - Transmission Control
- Cable Front/Rear Seat Rear Adjuster
- Calibrator Assembly
- Caliper Assembly - Front/Rear
- Caliper Hold Down Assembly
- Camshaft and Lever Assembly
- Camshaft Bearings
- Camshaft Damper and Pulley
- Camshaft Drive
- Cap - P/S Reservoir Filler
- Cap - Rad/O/Flow Control
- Cap - Reservoir
- Cap - Water Outlet
- Cap Assembly - Master Cylinder
- Cap Assembly - Radiator
- Capacitor Assembly - Alternator
- Carrier - Rear Axle
- Carrier Assembly - Differential
- Carrier Assembly - OD Planetary Gear
- Case - A/C Evaporator
- Case Assembly - Differential
- Case Assembly - Power Divider
- Case Differential Gear Support
- Cellular Phone/Receiver/Handset/Speaker Assembly
- Chain Timing
- Chassis Radio
- Child Seat Belt
- Cigar Lighter Assembly
- Clamp - Transmission Gear Shift Lever

- Clip - Brake Shoe Locator
- Clock Assembly
- Clutch and Pulley - Air Conditioner
- Clutch Assembly - Direct One-Way
- Clutch Bracket Assembly Fan
- Clutch Pack Assembly
- Clutch Pressure Plate
- Coil - A/C Compressor Clutch
- Coil Assembly - Ignition
- Collision Avoidance System
- Compass and Thermometer
- Readout Displays
- Compass Assembly
- Compressor - Air Conditioner
- Compressor - Front Brake
- Condenser Assembly - A/C
- Cone and Roller - Drive Pinion
- Cone Roller Front Wheel Inner
- Cone Roller Front Wheel Outer
- Connection - Water Outlet
- Control Arm Assembly - Front Suspension Upper/Lower
- Control Arm Assembly - Rear Suspension Upper/Lower
- Control Assembly - Brake Anti-Lock
- Control Assembly - Light Dimmer
- Control Assembly - Parking Brake
- Control Assembly - Relay
- Control Assembly - Trailer Module
- Control Assembly - Transmission Gear
- Control Assembly - Valve Body
- Control Head - Rear
- Control Module - Air Suspension
- Control Module - Heated Windshield
- Control Unit - Anti-Lock
- Control Valve Seals
- Controls - Rear Seat
- Coolant Pump
- Coolant Temp Switch
- Coolant Tube Assembly - Inlet
- Coolant Tube Assembly - Outlet
- Cooler - Crankcase Oil

- Cylinder Head Temperature Sensor
- Cylinder Keys Latch
- Cylinder Shaft Assembly - A/C Compressor
- Damper - Front Axle King Pin
- Fan A/C Condenser
- Fan Assembly - Alternator
- Fan Assembly - Heater Blow
- Fan Assembly - Motor
- Fan Assembly - A/C Condenser
- Core Assembly - Heater
- Countershaft
- Cover - Clutch Housing
- Cover - Cylinder Timing Gear
- Cover - Oil Level
- Cover - Rear Oil Pump
- Cover - Reverse Band Servo
- Cover - Transmission Control Indicator
- Cover Assembly
- Cover Assembly - Flywheel
- Cover Assembly - Rear Engine
- Cover Assembly - Valve Push Rod
- Cover Front/Rear Seat Track
- Cover Rear Seat Support
- Cover Transducer Mounting
- Crankcase Vent Tube
- Crankshaft Assembly
- Crankshaft Bearings
- Cup Wheel Bearing
- CV Joint Assembly - Inboard
- CV Joint Assembly - Outboard
- Cylinder Assembly - Direct Inter Clutch
- Cylinder Assembly - Door Lock
- Cylinder Assembly - Power Steering
- Cylinder Assembly - Rear Brake
- Cylinder Block

- Drive Assembly - Main Control Power Lift Window
- Drive Axle Assembly
- Drive Axle Bracket
- Drive Pinion
- Driveshaft Assembly
- Drum - Second Sun Gear
- Drum Assembly
- Drum Assembly - Transmission Reverse
- Drum Planetary Gear Assembly - Right
- Dust Seal - Inner Driveshaft
- Dust Shield
- DVD Player and Display
- Eccentric Cam Fuel Pump
- EGR Adapter
- EGR Air Valve Filter
- EGR Cooler
- EGR Inlet Tube
- EGR Pressure Valve
- EGR Regulator Assembly
- EGR Tube
- EGR Valve Assembly
- EGR Valve Position Sensor
- EGR Valve Solenoid
- Elbow - Crankcase Vent
- Electric Clutch Assembly
- Electric Power Steering Assist Assembly
- Electric Water Pump (Hybrid)
- Electronic Actuator Assembly
- Electronic Compass Assembly
- Electronic Control Assembly
- Electronic Pressure Control Solenoid
- Electronic Shift Control
- Electronic Speedometer
- Emissions Air Pump
- Engine Front Support Mount
- Engine Oil Cooler

- Front/Rear Disc Brake Caliper Pin
- Fuel Computer - Display Assembly
- Fuel Gauge - Instrument Panel
- Fuel Injection Module
- Fuel Level Sensor
- Fuel Line - Metal
- Fuel Pressure Regulator
- Fuel Pump Assembly
- Fuel Sep Fuel Vacuum
- Fuel Tank Vapor Valve
- Fuel Tank and Metal Lines
- Fuel Vapor Assembly
- Fuel Vapor Canister
- Gasket - Camshaft seal
- Gasket - Cylinder Head Cover
- Gasket - Engine Plenum
- Gasket - Fuel Injector Nozzle
- Gasket - Input Shaft Bearing
- Gasket - Lockout Hub
- Gasket - Master Cylinder Cooler
- Gasket - Oil Cooler
- Gasket - Oil Filter Adapter
- Gasket - Oil Pan
- Gasket - Oil Pump
- Gasket - Power Divider Cover
- Gasket - Pressure Regulator
- Gasket - PTO Cover
- Gasket - Rear Axle Bearing Rotor
- Gasket - Reverse Servo Plate
- Gasket - Trans Assembly
- Gasket - Trans Gear Shift Intermediate Band
- Gasket - Turbo Oil Tub
- Gasket - Water Pump
- Gasket - Wiring Connector
- Gasket and Shaft Seal

- Gauge Assembly Vacuum
- Gear - Camshaft Drive
- Gear - Center Shaft Reverse
- Gear - Countershaft Clutch Assembly
- Gear - Differential Shift
- Gear - Engine Balance Shaft
- Gear - Low and Reverse
- Gear - Oil Pump Drive
- Gear - Output Shaft
- Gear - Reverse
- Gear - Reverse Idler
- Gear - Transmission Countershaft
- Gear - Transmission Reverse Idler
- Gear and Pinion
- Gear Assembly - Final Drive
- Gear Assembly - Intermediate Steering Short
- Gear Assembly Spare Wheel
- Gear Bushing Assembly - Reverse Idle
- Gear Differential Planetary
- Gear Front Axle Shift
- Gear Ring Gear
- Gear Steering Column Lock
- Gear/Hub - Auxiliary Trans
- General Electronic Module
- GPS System and Module - Factory-Installed
- Guide - Sun Roof Cable
- Guide - Timing Chain
- Guide - Stabilizer Strap
- Handle Assembly - Rear Seat
- Head - A/C Compressor Cylinder
- Headlamp Ballast
- Headlamp/Tailamp Bulbs* Output Shaft
- Heads-up Display
- Heat Element - Front Seat Release
- Heat Shield

- Heater and A/C Control Regulator
 - HID (High Intensity Discharge) Headlights - Factory-Installed*
 - High Voltage Charger
 - Hinge and Check - Front/Rear Door Lower
 - Hinge - Front/Rear Door Upper
 - Horn Assembly - High Pitch
 - Horn Assembly - Low Pitch
 - Horn Switch
 - Hose - Power Steering Pressure Reservoir Top
 - Hose and Filter - Power Steering Line
 - Hose Assembly - A/C Vacuum
 - Hose Assembly - Power Steering Pressure
 - Hose Assembly - Power Steering Return
 - Hose Exhaust Air Pump
 - Hose Front/Rear Seat B/Pad
 - Housing - Steering Gear
 - Housing and Bearing Assembly Clutch
 - Housing and Ins Assembly Transaxle
 - Housing Assembly - Rear Axle
 - Housing Assembly Roof Slide
 - Housing Cover - Gearshift
 - Hub - Differential Gear Clutch
 - Hub - Direct Clutch
 - Hub - Intermediate Clutch
 - Hub - Synchronizer
 - Hub - Transmission Output Shaft
 - Hub /Knuckle Assembly
 - Hub Assembly - Clutch Release
- Hub Crankshaft Pulley
 - Hub Synchronizer
 - Hybrid Battery Cooler Assembly
 - Hybrid Battery Fan
 - Hybrid Battery Fan Motor
 - Hybrid DC to DC Converter Disconnect
 - Hybrid Information Display
 - Hybrid Traction/Electric Motor
 - Hydraulic Actuator Assembly
 - Hydraulic Piston
 - Idler Assembly - Timing Belt
 - Impeller - Water Pump
 - Indicator - Rear Bracket
 - Indicator Assembly - Oil Level
 - Indicator Assembly - Radio Receiver Control
 - Indicator Control Selector
 - Inertia Switch
 - Inflatable Seat Belts
 - Insert - Oil Pump Drive Gear
 - Insert - Synchronizer Hub
 - Insulator - Alternator
 - Insulator - Front Radius Arm
 - Insulator - Front Spring
 - Insulator - Rear Axle Differential
 - Insulator - Rear Spring
 - Insulator A/C Cond
 - Insulator EGR Tube
 - Insulator Front Spring
 - Insulator Rear Spring
 - Insulator Stabilizer Assembly
 - Insulator Steering Gear
 - Insulator/Mount - Engine Block
 - Intake Manifold Run
 - Intake Manifold Support
 - Intercooler
 - Interior/Exterior Door Handle/Lever

ESC PremiumCARE is so comprehensive, it's easier to refer you to what isn't covered – here are some examples:

Generally Covered by Your Auto Insurance

Examples include: fixed (non-moving) body parts, bumpers, glass, moldings, ornamentation, paint, rust, sheet metal, structural underbody framework, side and rearview mirrors (glass and housing), water leaks, wind noise, weather strips, wheels, wheel studs, wheel covers, convertible top and bow.

Repairs Related to Your Maintenance Requirements

Service adjustments and cleaning, software upgrades, fixed (non-moving) body parts, physical damage or cosmetic issues, repairs covered by manufacturer recalls, batteries of all types and cables, belts, hoses, hose clamps, brakes (front hub, drums, shoes, linings, disc rotors, pads), manual transmission clutch disc, coolant, exhaust system (including catalytic converter), filters, fluids, lubricants, lights (bulbs, sealed beam, lenses), spark plugs, spark plug wires, squeaks and rattles, tires, tune-ups, wheel balancing, wheel alignment, LED lights, shock absorbers and compressed natural gas/liquid propane fuel system conversion components.

Other Components and Repairs

Fabric, liners, fasteners, carpets, dash pad, wiper blades, knobs, trim, upholstery, physical damage or cosmetic issues, repairs covered by manufacturer recalls, any insurance or if the vehicle is within the time and mileage limits of any warranty, repairs caused by improper unreasonable use, unauthorized alterations or modifications of the vehicle, repairs caused by lack of required or recommended maintenance, and scheduled maintenance services. Costs or expenses for the teardown, rental expense, inspection or diagnosis of failures not covered by this Agreement. Refer to contract for details.

*Interior/Exterior Lighting – coverage included only if Lighting Option is purchased.